# **In-Line Releasing Device**

Installation Instructions



Effective: November 2004

### DESCRIPTION

The In-Line Releasing Device, P/N 06-220023-001, is used to make a single-or dual-solenoid releasing circuit power limited. See Figure 1.



Figure 1. In-Line Releasing Device

## SUPPLIED PARTS


In-Line Releasing Device, P/N 06-220023-001

### **REQUIRED TOOLS**

- No. 2 Flat-Head Screwdriver.
- Small Flat-Head Screwdriver.

#### **PROCEDURE**

- The In-Line Releasing Device is polarity-sensitive and must be connected as shown in Figure 2 for a singlesolenoid circuit or as shown in Figure No. 3 for a dualsolenoid circuit.
- The red lead of the In-Line Releasing Device must be connected to the field wiring from Terminal 1 of the releasing circuit. The black lead must be connected to the control head or solenoid valve.
- Use wire nuts to connect the In-Line Releasing Device to field wiring and leads from control heads and solenoid valves.

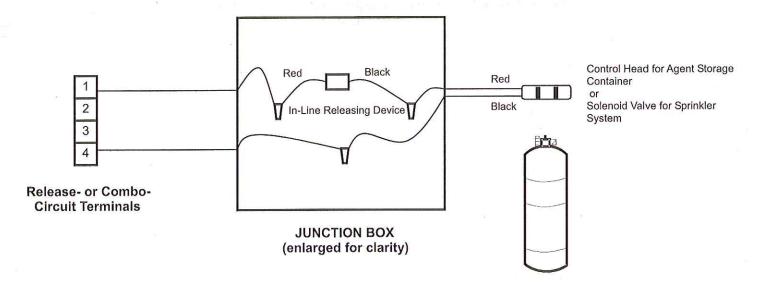

### Note:

Junction box for In-Line Releasing Device must be close nippled to control head or enclosure for solenoid valve.

Figure 2. Single-Control-Head or -Solenoid Releasing Circuit

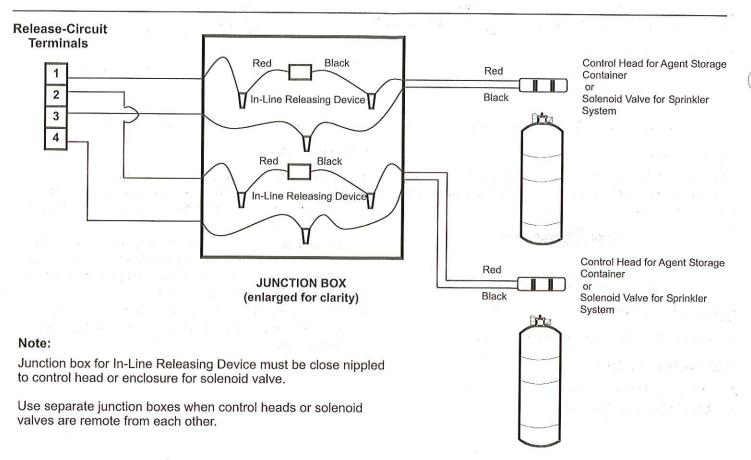


Figure 3. Dual-Control-Head or -Solenoid Releasing Circuit

Kidde-Fenwal is a registered trademark of Kidde-Fenwal, Inc.

This literature is provided for informational purposes only. KIDDE-FENWAL,INC. assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to work correctly.

If you need more information on this product, or if you have a particular problem or question, contact KIDDE-FENWAL INC., Ashland, MA 01721. Telephone: (508) 881-2000

