EGS: Remote control unit

Improving energy efficiency

Switch for easily changing the operating mode or switching off the heating, and setpoint adjustment knob for the individual adjustment of the setpoint temperature in the room

Features

- · For remote operation of the equitherm and equiflex heating controllers
- Adjustment knob for remotely setting the room-temperature setpoint
- · Possible to measure the room temperature via an integrated sensor
- Switch for changing the operating mode on the heating controller between automatic, normal and back-up modes

Technical data

| Parameters | | |
|------------------------------|--------------------------------|---|
| | Operating modes | Normal/off/automatic |
| | Type of signal | Coded resistance values |
| | Temperature sensor | Ni1000 (DIN 43760) |
| | Setpoint correction | ±2.5 K |
| Temperature sensor, internal | Dead time | Approx. 60 s |
| | Time constant | Approx. 600 s |
| | | |
| Ambient conditions | | |
| | Admissible ambient temperature | 540 °C |
| | | |
| Construction | | |
| | Weight | 0.1 kg |
| | Housing material | Fire-retardant thermoplastic |
| | Housing | 72 × 72 mm, pure white (RAL 9010) |
| | Fitting | Recessed/surface-mounted (acces- sories) |
| | Cable feed | At rear |
| | Screw terminals | For wires of up to 1.5 mm ² |
| | | |
| Standards and directives | | |
| | Type of protection | IP 40 EN (60529) |
| CE conformity as per | EMC directive 2004/108/EC | EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 61000-6-4 |
| Overview of types | | |
| | | |

| Overview of types | |
|-------------------|---------------------|
| Туре | Properties |
| EGS52/15F001 | Remote control unit |
| | |
| Accessories | |
| Tuno | Description |

| Туре | Description |
|------------|--|
| 0297441000 | Cover plate, pure white, for various recessed junction boxes |
| 0369573001 | Surface junction box, pure white |
| 0303124000 | Recessed junction box |

Description of operation

With the "without temperature sensor" type of connection, the foot point of the heating characteristic (normal and reduced) can be corrected with the setting knob (step potentiometer).

With the "with temperature sensor" type of connection, the room temperature is measured and regulated to the setpoint of the heating controller. The setting knob can then be used to make a remote adjustment of ± 2.5 K.

It is only possible to change the operating mode when the controller is in automatic mode.

Intended use

This product is only suitable for the purpose intended by the manufacturer, as described in the "Description of operation" section.





EGS52/15F001




All related product documents must also be adhered to. Changing or converting the product is not admissible.

Disposal


When disposing of the product, observe the currently applicable local laws. More information on materials can be found in the Declaration on materials and the environment for this product.

Connection diagram

EGS 52/15

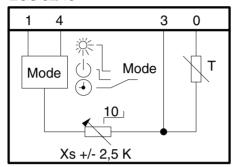

Dimension drawing

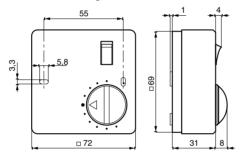

Product data sheet

Accessories

